Dual-Drawer Refrigerator

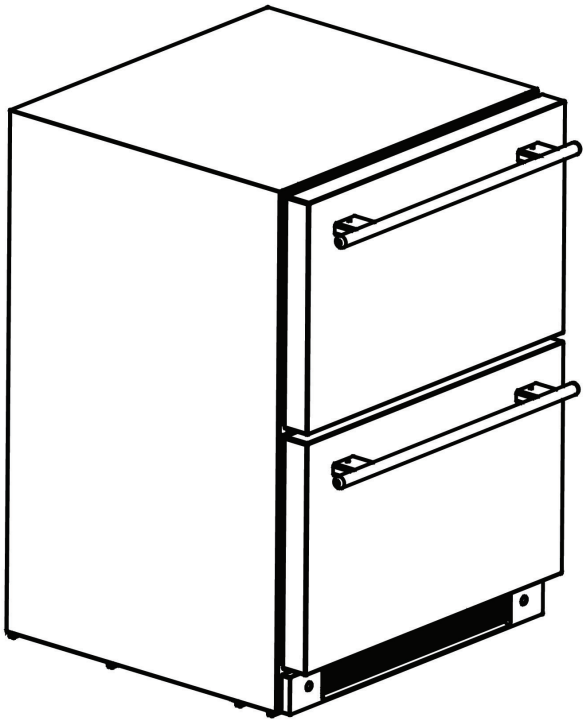

User Manual

Models: C121, C122, C123

Haier®

Quality • Innovation • Style

Important Safeguards

When using this appliance, always exercise basic safety precautions, including the following:

1. Read all of the instructions before using this appliance.
2. Use this appliance only for its intended purpose as described in this use and care guide.
3. This refrigerator must be properly installed in accordance with the installation instructions before it is used. See grounded instructions in the installation section.
4. Never unplug your refrigerator by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
5. Unplug your wine cellar before cleaning or before making any repairs. **Note:** If for any reason this product requires service, we strongly recommend that a certified technician performs the service.
6. Repair or replace immediately, all electric power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length, the plug or the connector end.
7. This appliance is designed for built-in use only into an enclosed cabinet.
8. If your old refrigerator is not being used, we recommend that you remove the door and leave the shelves in place. This will reduce possibility of danger to children.
9. Do not operate your refrigerator in the presence of explosive fumes.
10. Do not store foods in refrigerator as interior temperature many not be cool enough to prevent spoilage or may cause bacteria growth.
11. Cabinet edges along stamp/cut-out areas may be sharp. Please avoid placing hands, fingers or other appendages near these areas.
12. This appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure they do not play with the appliance.

13. CAUTION: DON'T USE EXTENSION CORDS.

SAVE THESE INSTRUCTIONS

DANGER

Risk of child entrapment. Before you throw away your old appliance, take off the doors. Leave the shelves in place so that children may not easily climb inside.

Table Of Contents

PAGE

Important Safeguards **1**

Parts And Overall Dimension **3**

Pre-Installation Instructions **4**
Preparation before installing **4**
Installation **5**

Interior Parts **6**
Crisper **6**
Adjustable Divider **6**

Drawers **8**
Upper Drawer **8**
Lower Drawer **8**

How To Use This Product **8**
Important notes before connecting the power supply **8**
Connect the power supply **8**
Interior LED bulb **8**
Temperature setting **8**
Setting Lock **9**
Degree Centigrade and Fahrenheit conversion **9**
Power switch **9**
Sabbath mode **9**
Sound alarm system **10**
Auto Defrost **10**

Cleaning **10**

TroubleShooting **11**

Limited Warranty **12**

Thank you for using our Haier product. This easy-to-use manual will guide you in getting the best use of your refrigerator.

Remember to record the model and serial number. They are on a label in back of the refrigerator.

_____
Model number

_____
Serial number

_____
Date of purchase

Staple your receipt to your manual. **You will need it to obtain warranty service.**

Parts And Overall Dimensions

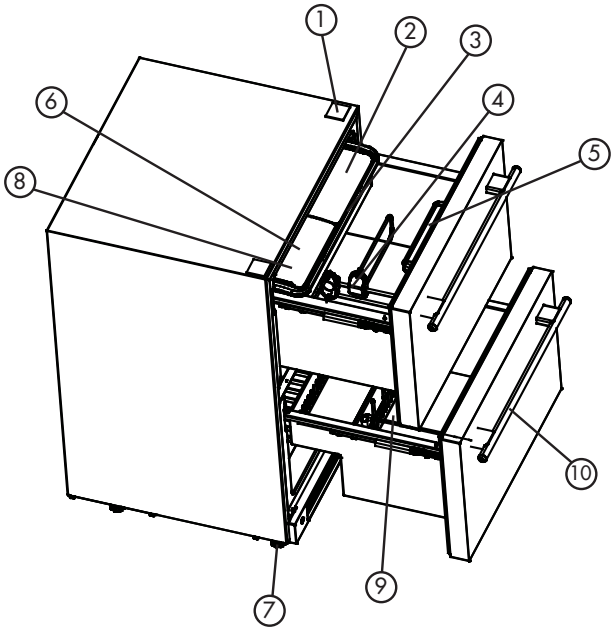

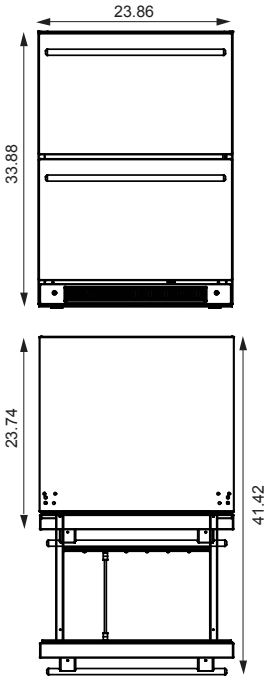

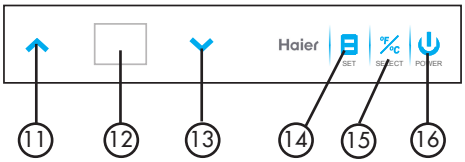

1. Cover
2. Upper Cover, Crisper
3. Crisper
4. Upper Partition Assy
5. Control Panel
6. Accessory Package
7. Feet
8. Lower Cover, Crisper
9. Lower Partition Assy
10. Handle
11. Button Upper
12. LED Screen
13. Button Lower
14. Thermo Set
15. °C/°F Conversion
16. Power Switch

Pre-Installation Instructions

This refrigerator is for built-in use only. Before use, this product must be installed properly.

Preparation Before Installing

First, clean product's surface with soft cloth, remove all protective coating and belt covering the product.

1. Pull the upper drawer open. Refer to the illustrations below. Put both dividers of shelf on the same side. Lift the crisper up off the drawer.

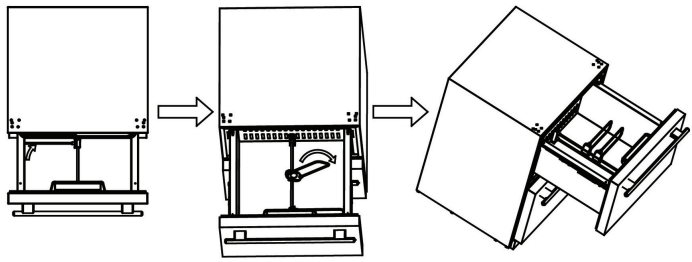

2. Lift both sides of shelf off the bin cradle with two hands together until the shelf is pulled out and rotate.

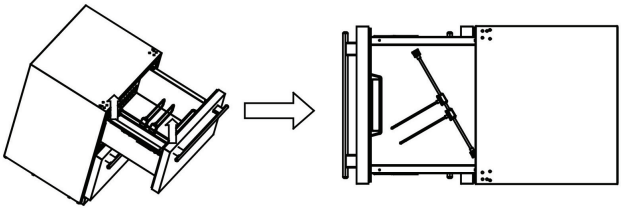

3. Take the upper shelf out of the upper compartment.

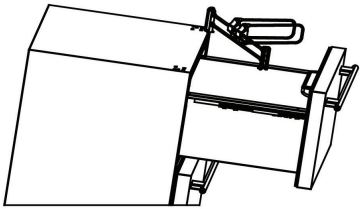

Note: After completing these three steps please close the upper drawer to avoid damage to your body by sliding out of drawers following installation.

Installation

1. Take off Part "1" (holes cover) of structural drawing with upwards motion. Refer to illustrations below:

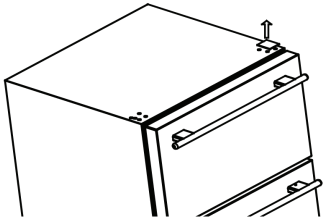

2. Take the anti-tip bracket and screws from the accessory bag. Tighten the anti-tip bracket on the top of the product with screws as follows in the illustration.

   Note: Follow instructions properly or you may do damage to product.

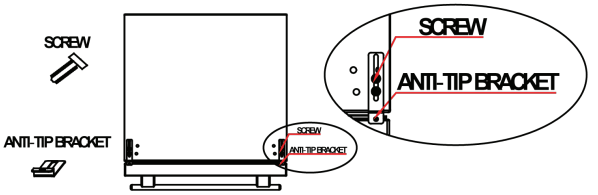

3. Put the unit inside of counter. Pull upper drawer open and attach the anti-tip bracket to counter by screw. You can adjust the feet on the corners of unit (Part 7 in Structural drawing).

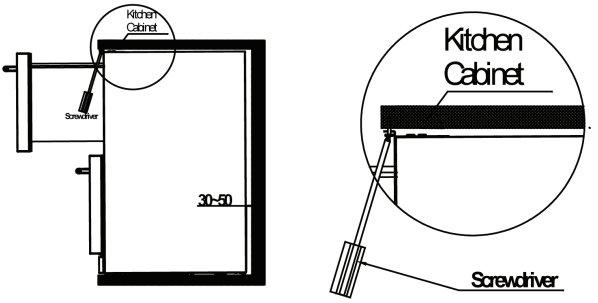

Interior Parts

Crisper

One cripser with cover in upper drawer, user can adjust the crisper depending on storage needs.
Purpose: Convenient for separate storage of fresh vegetable or fruits. It can stop offensive odors. You can take crisper out when not needed.

Adjustable Divider

There is an adjustable divider in each drawer. User can adjust them to be suitable for different food storage . You can take it out when not needed.

Note: Keep divider in safe place if taken out; especially keep it from children to avoid damage to them and itself.

Separate the compartment to left and right or vice versa.

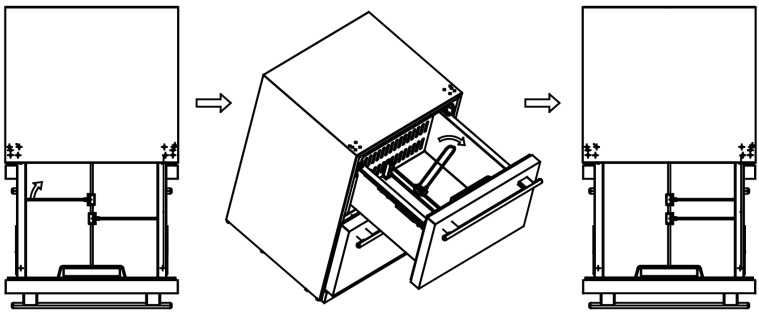

Separate the compartment to left and right or vice versa.

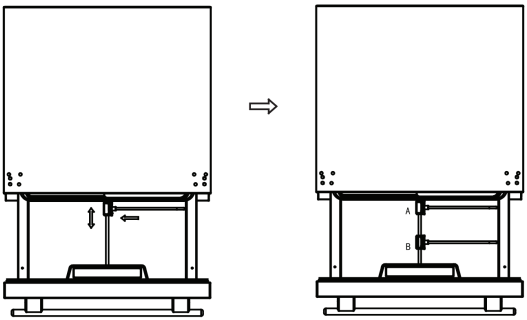

The upper compartment is seperated by a divider fastened to the bin cradle of upper compartment.Those two dividers can be adjusted left and right, also back and front. For left and right adjust: rotate directly. For back and front: you should push the “push” button in middle connector and move it back to front. If you want to clean your refrigerator, you can remove the shelf following step of “Preparation before installing”

Purpose: People can separate the upper compartment with divider according to personal needs. Keep foods fixed to avoid falling down when drawers are being opened and closed.

Adjust the divider in lower compartment by referring to illustration:

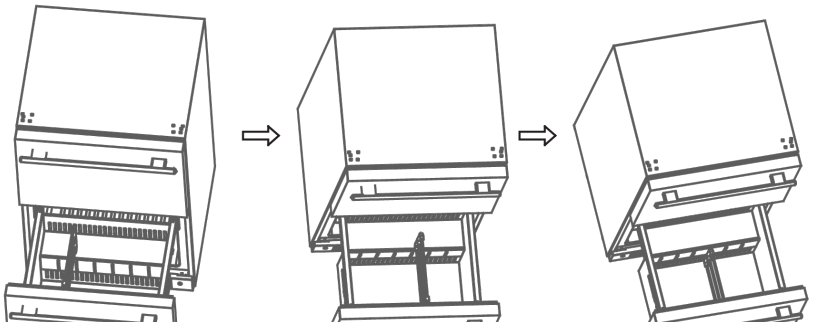

The divider in lower compartment is fixed between the embossments of front and back wall of drawer.You can choose different embossments to divide into different spaces in drawer.

Purpose: Separate the lower compartment with divider according to personal needs.

Drawers

Upper Drawer

Can hold a 2 liter bottle or any item under 12 inches tall.

Lower Drawer

Lower drawer is separated by step. Foods or beverage whose height is less than 12 inches can be kept in the space without step. Cans can be kept in space with step.

How to use this product

Important Notes Before You Connect the Power Supply

Actual power supply should be kept in accordance with marks on rating

plate(115V/60HZ).Rating plate is on back of unit.
Power socket should be equiped with fuse of 10A. Keep the refrigerator still for 30 minutes to 1 hour before connnecting to power socket which has been grounded.

CAUTION: DON'T USE EXTENSION CORDS

Connect the power supply

Unit is inspected and set to be 38° before leaving the factory. When connected with the power supply, Unit will work normally.

Interior LED bulb:

LED bulb is located on top of interior liner in each upper and lower compartment. It is controlled by approaching switch: when drawer is open, it's on, when drawer is closed, it's off.
Caution: There are magnets that are affixed on left side of interior upper drawer and bottom of lower drawer door. Don't remove them as they turn interior light on or off.

Temperature setting:

If you want to change temperature, press "SET" for three seconds, temperature will flash in control panel,then you can adjust the figure and press "SET" to confirm after you complete your operation.

Note: Please do not set temperature below 34°F because it could harm perishable products.

If you want to reduce the temperature, press the "v" button.
If you want to raise the temperature, press the "^" button.

Temperature range is : 34-47°F (1-7°C)

Settings Lock:

The settings lock keeps your intended temperature settings in place in case of an accidental touch on the touch pad.

To unlock: press "SET" for 3 seconds. When you hear "TICK", it means unlocked. The temperature figure flashes and you can now unlock. After adjustment, press "SET" to confirm and start settings lock clock. Now you can't adjust the temperature by pressing "^" "v".

Degree Centigrade and Fahrenheit Conversion:

Press and hold"select"for 3 seconds, temperature display will change from Fahrenheit to Centigrade degree,buzzer will ring once. Press and hold "select" for 3 seconds,it will change form Centigrade back to Fahrenheit, buzzer will ring once again.

Power switch:

Display panel has power button. If you want to stall unit from working for a short time or to restart,press and hold "power" for 3 seconds to open and close.

Note: If you want to stop the unit from working for a long time, please shut off power supply, unplug socket, cut off the fuse, clean refrigerator, and remove door of unit to get rid of odor.

Sabbath mode:

Press and hold "^" and "v" at the same time for 3 seconds, buzzer will ring once, display panel will flash 3 times and stop. This indicates that the unit has entered Sabbath mode.In this mode,normal cooling operations still take place(compressor,magnetic valve,fan,heater strip), but all luminous equipment including display panel, and LED bulb will shut off no matter if door is opening or closing.

Press and hold "^" and "v" at the same time for 3 seconds, after display panel flashes 3 times, you can exit from Sabbath mode.

Note: This mode is available for the observance of certain religious holidays.

Alarm System:

Alarm system monitors if the drawers are left open or internal temperature gets too hot or cold.

Door Ajar Alarm: If the door of unit is kept open for a long time and it affects temperature, the system will give an alarm. If you want to stop it, press “SET” button.

Auto Defrost:

Unit can defrost automatically: The water on back wall will drain into water tank and be evaporated by the condensator. Please check if water can drain into the tank automatically.

Cleaning

Before cleaning, turn unit off.

Clean interior surfaces and accessories and outer frame with cold water and a little baking soda.

Don’t clean with steam to avoid damage to product.

Don’t use abrasive, acidic and chemical cleanser.

Keep cleanser from elcetrical device.

Clean and dry all accessories.

Clean drain hole which is between comparments of unit with a small and soft material such as cotton swab.

Troubleshooting

If Refrigerator does not operate:

Check if refrigerator is plugged in.
Check if there is power in the AC outlet, by checking the circuit breaker.

If Refrigerator is too warm:

Frequent door openings.
Allow time for recently added beverage to reach desired temperature.
Check gaskets for proper seal.
Clean condenser coils.
Adjust temperature control to colder setting.

If Refrigerator runs too frequently:

This may be normal to maintain constant temperature during high temperature and humid days.
Doors may have been opened frenquently or for an extended period of time.
Clean condenser coils.
Check gasket for proper seal.
Check to see if doors are completely closed.

If Moisture build up on interior or exterior of the refrigerator:

This is normal during high humidity periods.
Prolonged or frequent door openings.
Check gaskets for proper seal.

If Refrigerator door does not shut properly:

Level the refrigerator.
Check for blockages e.g. beverage bottles, slide orbit, signal wire under the upper drawer and the switch under the door plate of the lower drawer.

Limited Warranty

What is covered and for how long?

This warranty covers all defects in workmanship or materials for a period of :
12 months labor
12 months parts
5 years sealed system
The warranty commences on the date the item was purchased and the original purchase receipt must be presented to the authorized service center before warranty repairs are rendered.
EXCEPTIONS:Commercial or Rental Use warranty
90 days labor(carry-in only)
90 days parts
No other warranty applies

What is covered?

The mechanical and electrical parts, which serve as a functional, purpose of this appliance for a period of 12months. This includes all parts except finish and trim.
The components of the sealed system e.g. hermetic compressor,condenser and evaporator from manuafacturing defects for a period of 5 years from the date of purchase.
Any damages to such components caused by mechanical abuse or improper handling or shipping will not be covered.

What will be done?

We will repair or replace,at our discretion any mechanical or electrical part which proves to be defective in normal usage during the warranty period so specified.
There will be no charge to the purchaser for parts and labor on any covered items during the initial 12 month period. Beyond this period only parts are covered in the remaining warranty. Labor is not provided and must be paid by the customer.
Contact your nearest authorized service center. For the name of the nearest serive center please call 1-877-337-3639
THIS WARRANTY COVERS APPLIANCES WITHIN THE CONTINENTAL UNITED STATES, PUERTO RICO AND CANADA. IT DOES NOT COVER THE FOLLOWING:
Damages from improper installion.
Damages in shipping.
Defects other than manufacturing.
Damage from misuse, abuse, accident, maintenance or incorrect current or voltage.
Damage from other than household use.
Damage from service by other than an authorized dealer or service center.
Decorative trims or replaceable light bulbs.
Transprotation and shipping.
Labor(after the initial 12 months).
THIS LIMITED WARRANTY IS GIVEN IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR, INCLUDING THE WARRANTY OF MERCHANTABILITY AND FINESS FOR A PARTICULAR PURPOSE
The remedy provided in this warranty is exclusive and is granted in lieu of all other remedies.
This warranty does not cover incidental or consequential damages, so the above limitations may not apply to you. Some States do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary, from state to state.

Haier America
New York, NY 10018

IMPORTANT

Do Not Return This Product To The Store

If you have a problem with this product, please contact the "Haier Customer Satisfaction Center" at 1-877-337-3639.

DATED PROOF OF PURCHASE REQUIRED FOR WARRANTY SERVICE

IMPORTANT

Ne pas Réexpédier ce Produit au Magasin

Pour tout problème concernant ce produit, veuillez contacter le service des consommateurs 'Haier Customer Satisfaction Center' au 1-877-337-3639.

UNE PREUVE D'ACHAT DATEE EST REQUISE POUR BENEFICIER DE LA GARANTIE.

IMPORTANTE

No regrese este producto a la tienda

Si tiene algún problema con este producto, por favor contacte el "Centro de Servicio al Consumidor de Haier" al 1-877-337-3639 (Válido solo en E.U.A).

NECESITA UNA PRUEBA DE COMPRA FECHADA PARA EL SERVICIO DE LA GARANTIA

115V, 60 Hz

Made in China
Fabriqué en Chine
Hecho en China

Haier®

Haier
New York, NY 10018

C121, C122, C123
101263

Printed in China